



INSTRUCTIONS EL NIÑO BOOSTER PUMP

Booster pump should be placed lower than the by-pass and on the pressure side for maximum performance. The booster pump has a maximum head of approx. 2,0 meter (7.0 ft) depending on existing circulation pump. Flow rate should measure 3-6 liters/minute.



INCLUDED IN THE BOX:

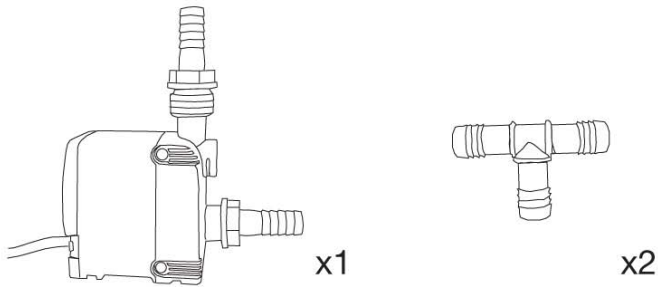

Connection with 1 Basic Kit

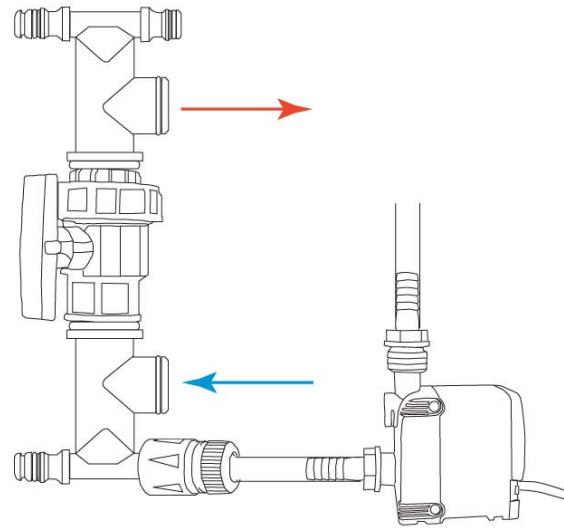

Connection with 2 Basic Kits

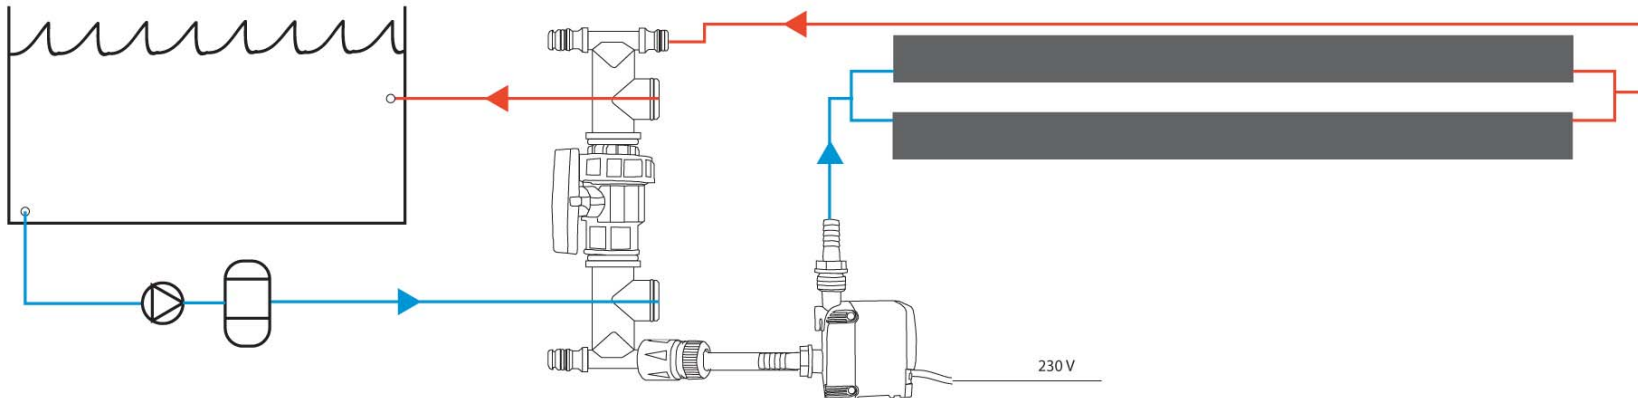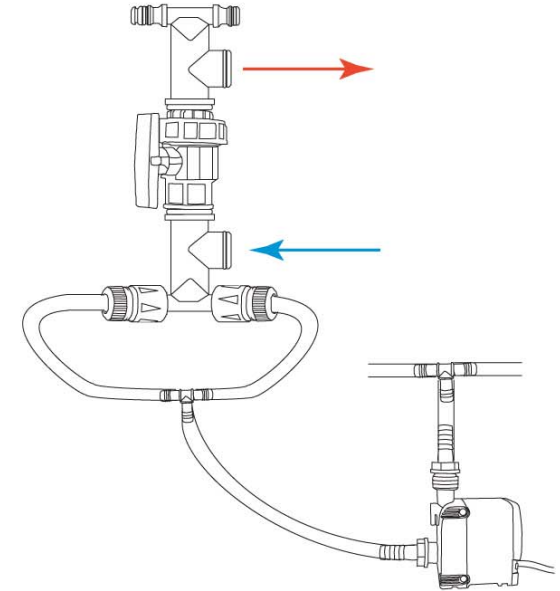

Pump certified in accordance with CE and TÜV.

For more information see:
www.elnino.nu